


# WB, WBT

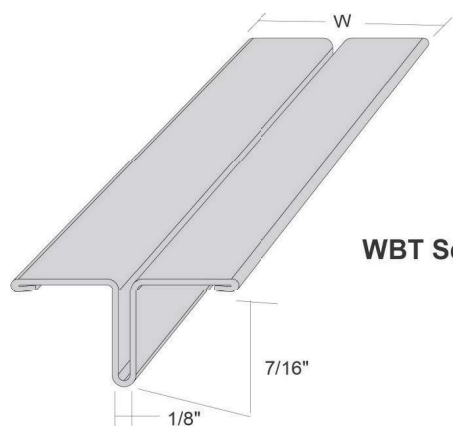

**WBT Series**

## DESIGN FEATURES

**WB Series:** We recommend metal bracing only be used to serve as temporary bracing to prevent racking before structural sheathing is applied. Metal bracing should never be used as a substitute for shear wall sheathing, as it offers only about one-tenth the resistance to racking as 3/8" plywood.

**WBT Series:** T wall brace extra-rigid lengths won't bend as easily as flat brace, making installation easier. No X-pattern installation needed.

## MATERIAL


WB 16 ga. galvanized steel

WBT 22 ga. galvanized steel

## CODES

FL Approval #8283, ICC ESR-1347

| ITEM ID | Length | Steel Gauge No. | Width  | Angle / Wall Height | Nail Schedule <sup>1</sup> |       |
|---------|--------|-----------------|--------|---------------------|----------------------------|-------|
|         |        |                 |        |                     | Plate                      | Stud  |
| WB10    | 9'3"   | 16              | 1-1/4" | 60° / 8 feet        | 3-10d                      | 1-10d |
| WB12    | 11'5"  | 16              | 1-1/4" | 45° / 8 feet        | 3-10d                      | 1-10d |
| WB14    | 13'6"  | 16              | 1-1/4" | 45° / 10 feet       | 3-10d                      | 1-10d |
| WB16    | 15'6"  | 16              | 1-1/4" | 45° / 12 feet       | 3-10d                      | 1-10d |
| WBT10   | 9'6"   | 22              | 2"     | 60° / 8 feet        | 4-8d                       | 1-8d  |
| WBT12   | 11'4"  | 22              | 2"     | 45° / 8 feet        | 4-8d                       | 1-8d  |

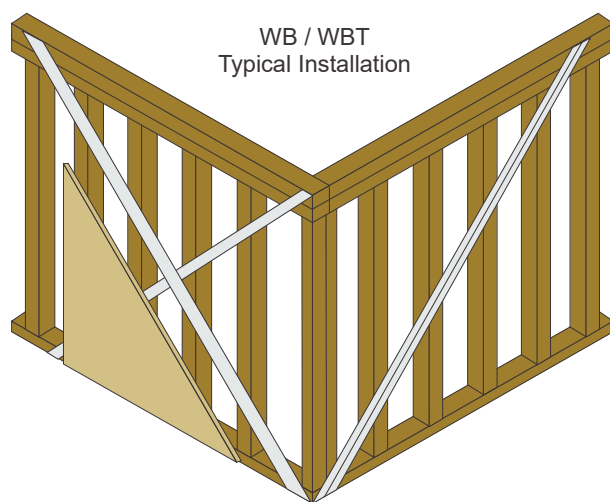

**WB / WBT**  
Typical Installation